





Model:

PB-3K

Product Type:

Portable Work Stand

Parts Breakdown

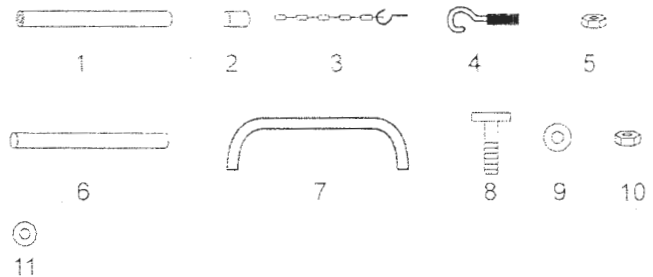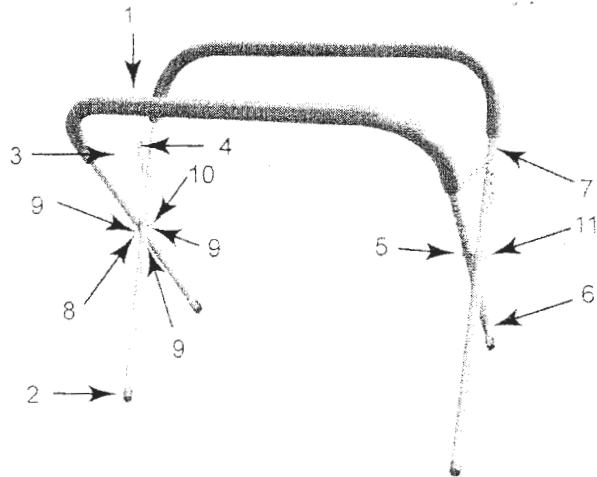

Part No.	Description	Q'ty
PB-3K-01	Foam	2
PB-3K-02	Rubber Cover	4
PB-3K-03	Chain with Eye Hooks	2
PB-3K-04	Eye Bolt	2
PB-3K-05	M8 Lock Nut	2
PB-3K-06	Leg Tube	4

Part No.	Description	Q'ty
PB-3K-07	Frame Top tube	2
PB-3K-08	Bolt	2
PB-3K-09	Washer 8*22MM	2
PB-3K-10	Nut	2
PB-3K-11	Washer 8*15MM	8

Assembly Instruction

Metal edges can be sharp, please use extreme caution during assembly.

1. Attach Rubber Covers (#2) to bottom Leg Tube (#6).
2. Slide Foam (#1) on Frame Tops(#7).
3. Attach one Hex Nut (#5) to Eye Bolts (#4) so that the Eye Bolt is on the inside of the Work Bench (see Parts Diagram on back of this page). Repeat the same step for the second set of legs. When complete and the Work Bench is assembled, the Eye Bolts (#4) will be on opposite sides facing inward.
4. Slide Leg Tube (#5) into frame Top Tube (#7) so that the holes are aligned. Slide Leg Tube with Rubber Covers (#3) into top Leg Tube (#6).
5. Attach Chain with Eye Hooks (#3) to the Eye Bolts (#4) so that all Eye Hooks are facing inward when complete. When the Work Bench is assembled, the Chain with Eye Hooks and the Eye Bolts will be on opposite sides facing inward.
6. Set up both parts of the stand so that Eye Bolts (#4) and chain with Eye Hooks are on opposite sides facing inside of Work Bench. Attach Chain with Eye Hooks to Work Bench. Attach both halves together with Bolt (#8), Washer (#9) and Nut (#10). Insert washers between each leg on each side of the stand, as well as between Nut and stand and Bolt and stand. A washer should be used at all points that metal is in contact with metal.
7. Tighten all bolts when completely assembled.